Dismantling information for use by professional recyclers

ORIGINAL MANUAL ISSUE DATE: 2021.02

Model :

KE-55XH9005	KE-65XH9005	KE-75XH9005	KE-85XH9096
KE-55XH9077	KE-65XH9077	KE-75XH9096	FW-85BZ40H
KE-55XH9096	KE-65XH9096	KE-75XH9288	
KE-55XH9288	KE-65XH9288	KE-75XH9296	
KE-55XH9296	KE-65XH9296	KE-75XH9299	
KE-55XH9299	KE-65XH9299	FW-75BZ40H	
FW-55BZ40H	FW-65BZ40H		

9-888-784-41

LCD TV

Conditions of Use:
(1) Please use this information only for the purpose of repair and recycling of Sony products. Using this information for any purpose other than the purpose described foregoing is forbidden.
(2) Do not copy, replicate, reproduce, alter, translate, transmit, sell, lease, or distribute this information in whole or in part without the prior written permission of the author.

Revision of Information:
This information may be changed or updated at any time without any prior notice. Please confirm that this information is up-to-date before using it.

SONY

Sony Home Entertainment & Sound Products Inc.
© 2021.02

MODEL LISTS

MODEL	REMOTE	DESTINATION
KE-55XH9005	RMF-TX500E	CEI , UKA
KE-55XH9077	RMF-TX500E	CEI
KE-55XH9096	RMF-TX500E	CEI
KE-55XH9288	RMF-TX600E	CEI
KE-55XH9296	RMF-TX500E	UKA
KE-55XH9299	RMF-TX600E	CEI
FW-55BZ40H	RMT-TB400U	CEI
KE-65XH9005	RMF-TX500E	CEI, UKA
KE-65XH9077	RMF-TX500E	CEI
KE-65XH9096	RMF-TX500E	CEI
KE-65XH9288	RMF-TX600E	CEI
KE-65XH9296	RMF-TX500E	UKA
KE-65XH9299	RMF-TX600E	CEI
FW-65BZ40H	RMT-TB400U	CEI
KE-75XH9005	RMF-TX500E	CEI, UKA
KE-75XH9096	RMF-TX500E	CEI
KE-75XH9288	RMF-TX600E	CEI
KE-75XH9296	RMF-TX500E	UKA
KE-75XH9299	RMF-TX600E	CEI
FW-75BZ40H	RMT-TB400U	CEI

MODEL	REMOTE	DESTINATION
KE-85XH9096	RMF-TX500E	CEI, UKA
FW-85BZ40H	RMT-TB400U	CEI

RMF-TX500E

RMF-TX600E

RMT-TB400U

TOOLS & EQUIPMENTS

1 LIST OF ITEMS TO BRING

1. Screwdriver (e.g. #2 Phillips Screwdriver)
2. Multimeter
3. ESD Wrist Straps
4. Metal Washer (Flat) or Coin (for remove Rear Cover)
5. Ruler (for remove Rear Cover)

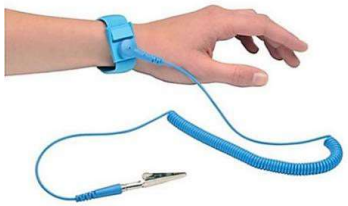

2 OPTIONAL EQUIPMENT

1. Screwdriver (e.g. #0 Phillips Screwdriver)
2. Parts Tray for loose screws and small items
3. Flashlight

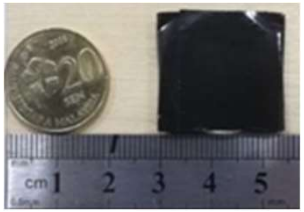

Thickness: approx. 1.5mm
Diameter: 20~25mm
(wrap in tape (L=50mm))

Plastic or Metal Ruler
(In case of Metal ruler, wrap in tape (L=50mm) for prevent scratches)

For Surface Mounted Parts/Connectors;

Hot-Air Type soldering Iron is needed.

DISSASSEMBLY AND REMOVAL CAUTION 55”

SECTION 1
KE-55XH9*/FW-55BZ40H

1-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 1 :

Disassemble screw from Rear Cover.

Symbol	Quantity	Descriptions
○	1	Ac Cover Screw
●	4	Rear Cover Screw

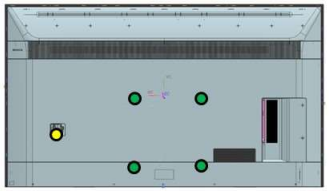

Step 2 :

Unhook Rear Cover Hook

(a) Side Hook

Symbol	Quantity	Descriptions
□	8	Rear Cover Push Point
□	8	Back Chassis – Rear Cover Hook
□	2	Bottom Back Chassis – Rear Cover Hook

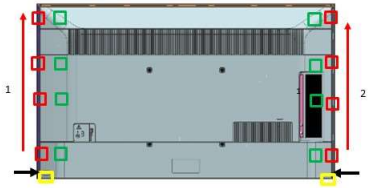

SECTION 1
KE-55XH9*/FW-55BZ40H

1-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

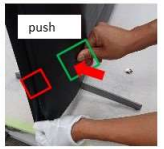

Step 2 : (continue)

Unhook Rear Cover Hook

(a) Side Hook

1) Draw out a bottom side of Rear Cover
2) Hand in the gap of Rear Cover and Bezel and push the push position of Rear Cover

Notes:
- Must use gloves.
- Coin or jig to unhook bottom Rear Cover-Bezel hook
- Wrap coin by tape
- Thickness approximately 1.0 to 1.5mm

SECTION 1
KE-55XH9*/FW-55BZ40H

1-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 2 :

Unhook Rear Cover Hook

(b) Bottom Hook

Symbol	Quantity	Description
□	4	Bottom Back Chassis – Rear Cover Hook

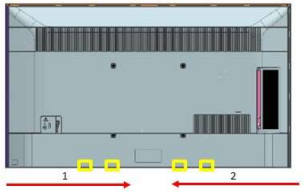

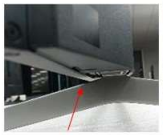

1) Slit of the Rear Cover hook
2) Put coin or jig in the slit of Rear Cover hook
3) Turn coin or jig to the direction of the arrow

Notes:
- Coin or jig to unhook bottom Rear Cover-Bezel hook
- Wrap coin by tape
- Thickness approximately 1.0 to 1.5mm

SECTION 1
KE-55XH9*/FW-55BZ40H

1-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 3 :

Unhook Top Back Chassis to Rear Cover hook

1) Pull the Rear Cover.
2) Push Rear Cover upwards to release the top hooks then lower the Rear Cover.

Symbol	Quantity	Description
○	6	Top side Back Chassis – Rear Cover Hook

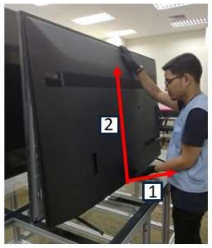

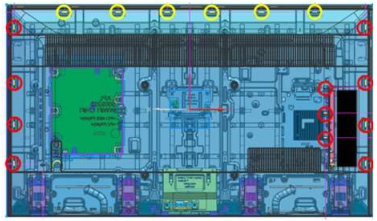

EXPLODED VIEW 55”

•Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
• ⚠ and shaded parts are critical for safety. Replace only with part number specified.
• 🔒 Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.

- (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
- Picture provided in this section might have slight difference from the actual sets.
- The reference number beside the part indicates the disassembly sequence.
- Remove screws before disassembly. Unplug connectors before disassembly

1-4 EXPLODED VIEW AND PART LIST

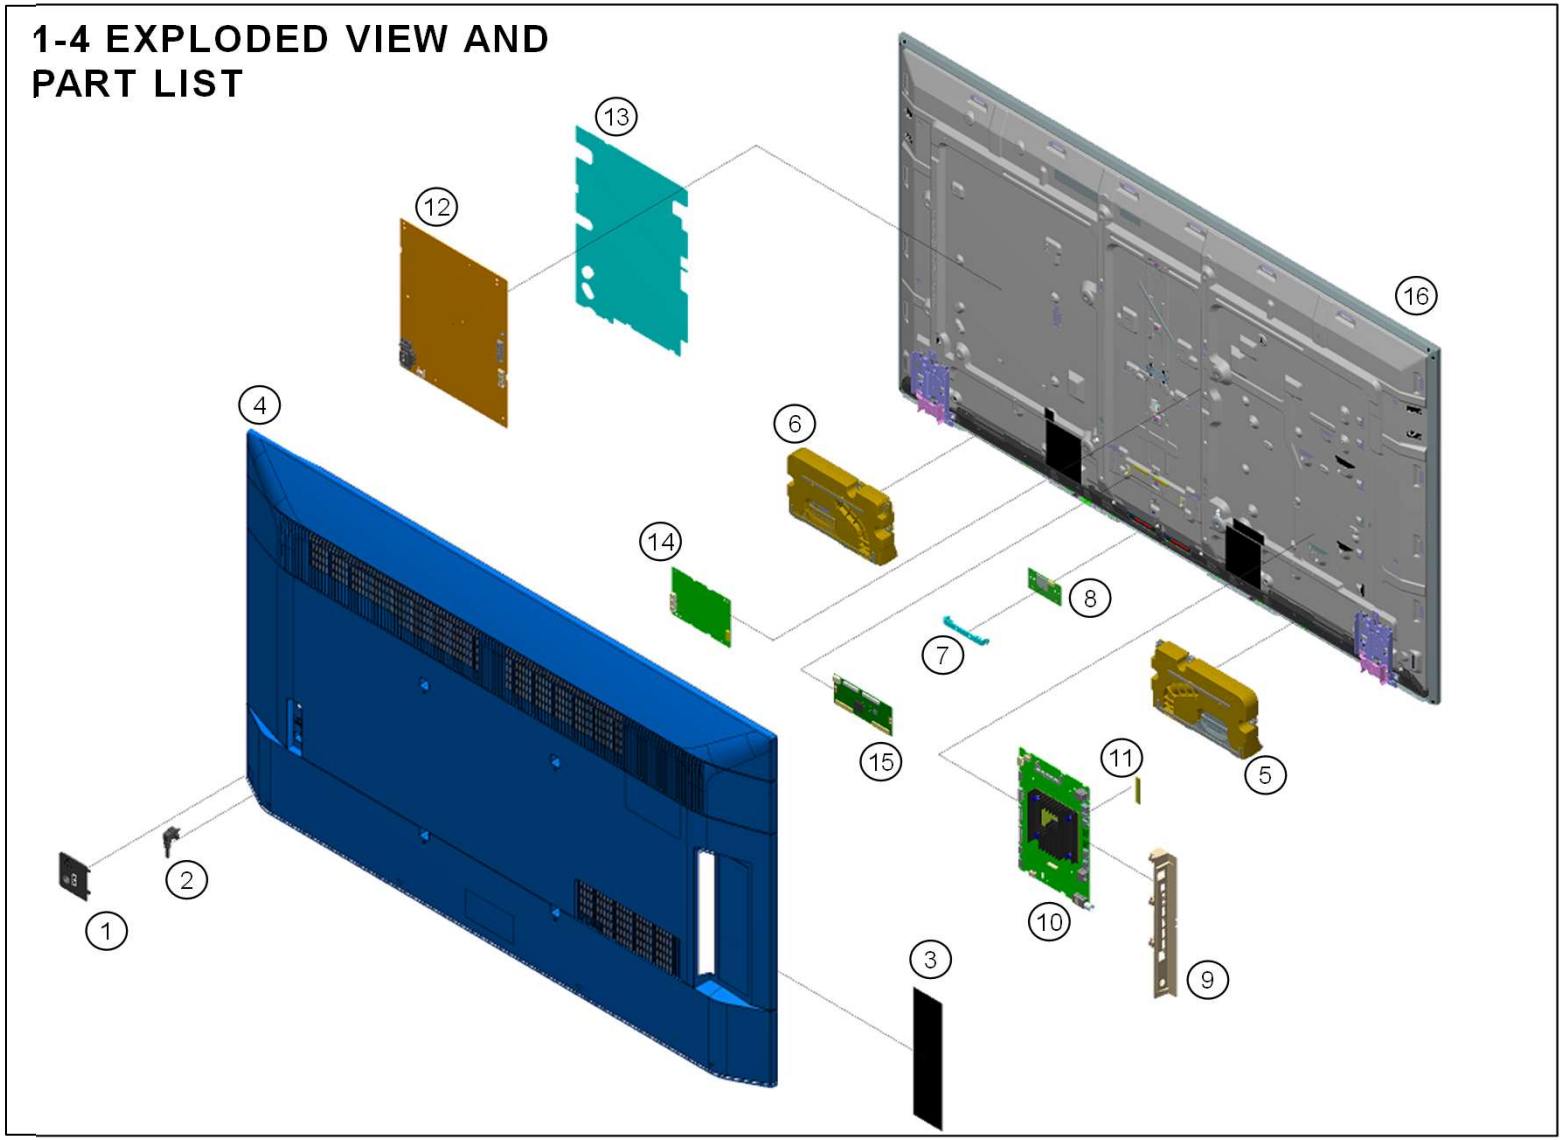

Stand

HARNESS/CABLES 55”

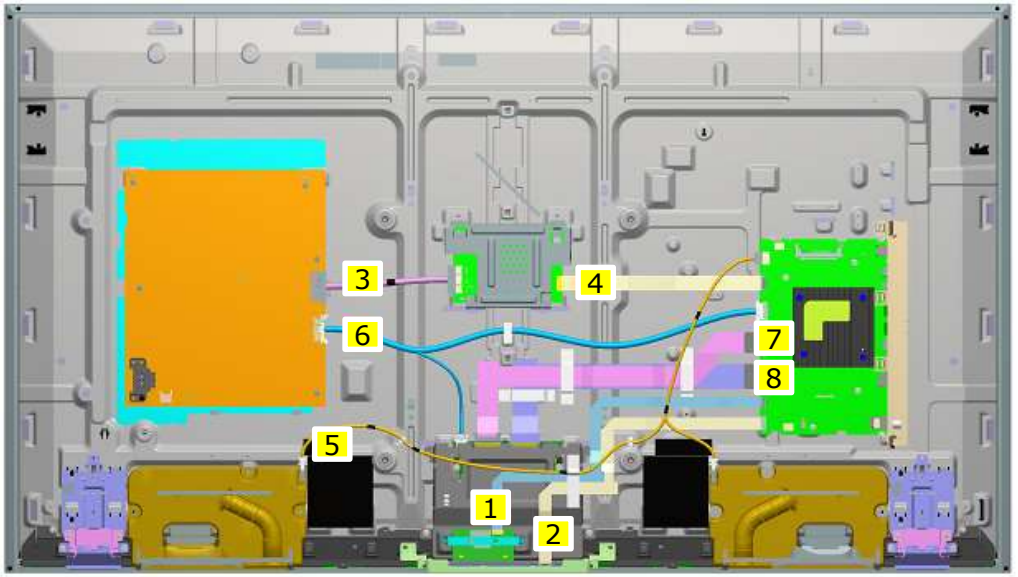

REF. NO	PART NO.	DESCRIPTION	REMARKS
1	1-006-505-11	FLEXIBLE FLAT CABLE 20P	CN3801(B)-CN1202(BT)(1)
2	1-006-508-11	FLEXIBLE FLAT CABLE 25P	CN1200(B)-CN102(H)(1)
3	1-007-098-11	CONNECTOR ASSY 15P	CN6601(PSU)-CN1003(LD)(1)
4	1-007-185-11	FLEXIBLE FLAT CABLE 30P	CN1603(B)-CN1000(LD)(1)
5	1-007-218-11	CONNECTOR ASSY 6P (SP)	CN3501(B)-SP(1)
6	1-007-220-11	CONNECTOR ASSY 28P	CN1700(B)-CN6401(PSU)-CON3(TCON)(1)
7	1-007-186-11	FLEXIBLE FLAT CABLE 41P	CN4201(B)-U2(TCON)(1)
8	1-007-460-11	FLEXIBLE FLAT CABLE 51P	CN4200(B)-U1(TCON)(1)

PARTS LIST 55”

SET PART LIST

REF. NO	PART NO.	DESCRIPTION	REMARKS	
2 ⚠	1-005-621-11	C7L AC POWER CODE SETS (EU)	(CEI)	
2 ⚠	1-005-628-11	C7L AC POWER CODE SETS (UK)	(UKA)	
10 🔒	A-5014-805-A	COMPL SVC BM5_WW_B2B_55	FW-55BZ40H	
10 🔒	A-5014-795-A	COMPL SVC BM5_EUUK_55	Except FW-55BZ40H	
12 🔒	1-006-134-21	G04P - STATIC CONVERTER(TV)		Cable
14	A-5012-968-A	20LD24A1 COMPL		Printed Circuit Board, incl. capacitors
15	1-007-573-11	MOUNTED PWB E-T-CON(55)		Printed Circuit Board, incl. capacitors
16 ⚠	A-5016-544-A	P-MOD (YDAS055DND01)	FW-55BZ40H	Printed Circuit Board, incl. capacitors
16 ⚠	A-5016-501-A	P-MOD (YDAS055DND01)	KE-55XH9005/9096/9288/9296/9299 (CEI/UKA)	Printed Circuit Board, incl. capacitors
16 ⚠	A-5016-506-A	P-MOD (YDAS055DND01)	KE-55XH9077 (CEI)	Liquid Crystal Display

DISSASSEMBLY AND REMOVAL CAUTION 65”

SECTION 2
KE-65XH9*/FW-65BZ40H

2-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 1 :

Disassemble screw from Rear Cover.

Symbol	Quantity	Descriptions
○	1	Ac Cover Screw
○	4	Rear Cover Screw

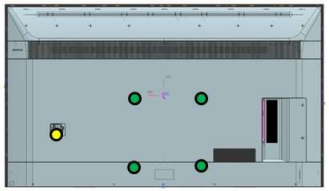

Step 2 :

Unhook Rear Cover Hook

(a) Side Hook

Symbol	Quantity	Descriptions
□	10	Rear Cover Push Point
□	10	Back Chassis – Rear Cover Hook
□	2	Bottom Back Chassis – Rear Cover Hook

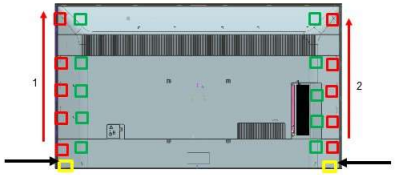

SECTION 2
KE-65XH9*/FW-65BZ40H

2-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 2 : (continue)

Unhook Rear Cover Hook

(a) Side Hook

1) Draw out a bottom side of Rear Cover
2) Hand in the gap of Rear Cover and Bezel and push the push position of Rear Cover

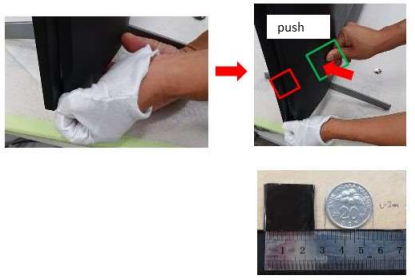

Notes:
- Must use gloves.
- Coin or jig to unhook bottom Rear Cover-Bezel hook
- Wrap coin by tape
- Thickness approximately 1.0 to 1.5mm

SECTION 2
KE-65XH9*/FW-65BZ40H

2-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 2 :

Unhook Rear Cover Hook

(b) Bottom Hook

Symbol	Quantity	Description
□	6	Bottom Back Chassis – Rear Cover Hook

1) Slit of the Rear Cover hook
2) Put coin or jig in the slit of Rear Cover hook
3) Turn coin or jig to the direction of the arrow

Notes:
- Coin or jig to unhook bottom Rear Cover-Bezel hook
- Wrap coin by tape
- Thickness approximately 1.0 to 1.5mm

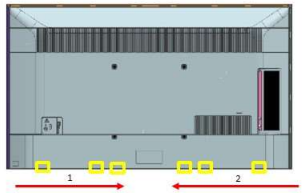

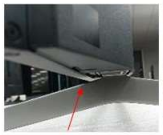

SECTION 2
KE-65XH9*/FW-65BZ40H

2-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 3 :

Unhook Top Back Chassis to Rear Cover hook

1) Pull the Rear Cover.
2) Push Rear Cover upwards to release the top hooks then lower the Rear Cover.

Symbol	Quantity	Description
○	7	Top side Back Chassis – Rear Cover Hook

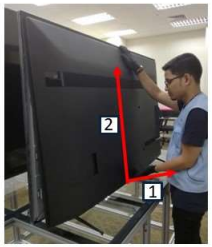

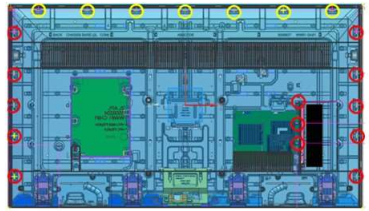

EXPLODED VIEW 65”

•Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
• ⚠ and shaded parts are critical for safety. Replace only with part number specified.
• 🔒 Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.

- (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
- Picture provided in this section might have slight difference from the actual sets.
- The reference number beside the part indicates the disassembly sequence.
- Remove screws before disassembly. Unplug connectors before disassembly

2-4 EXPLODED VIEW AND PART LIST

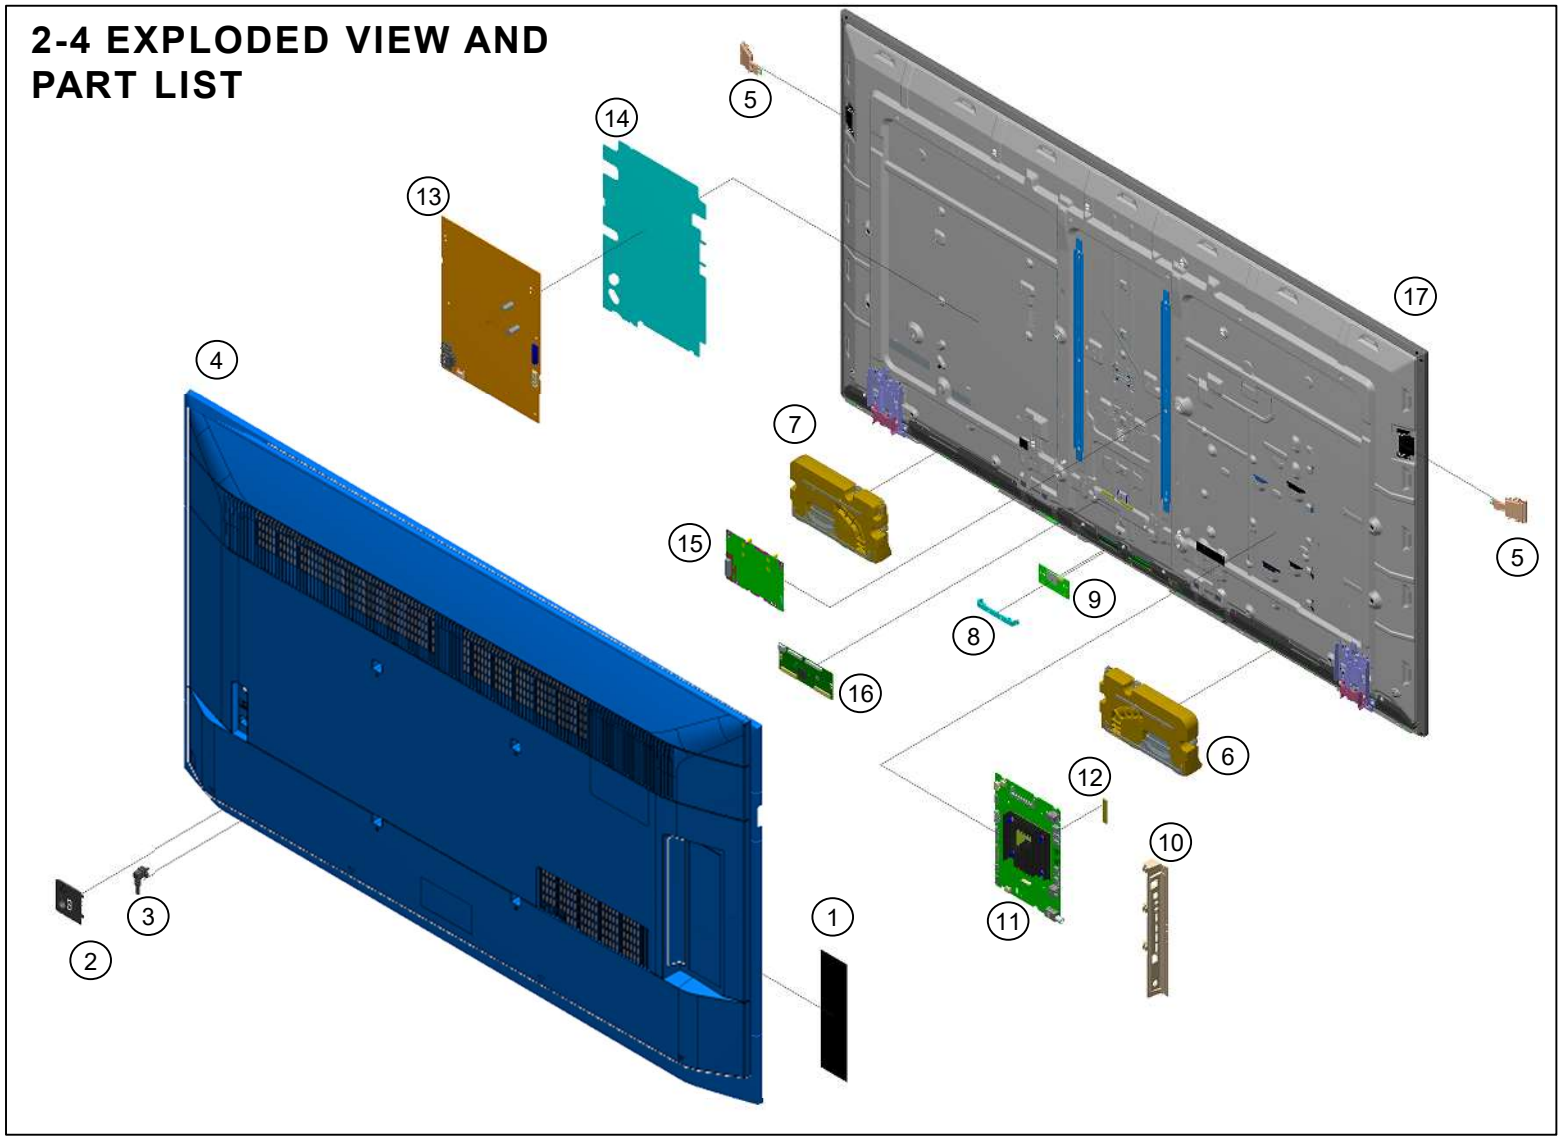

Stand

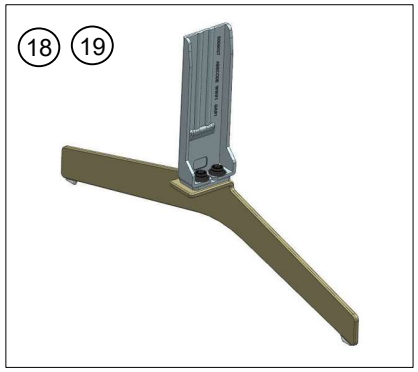

HARNESS/CABLES 65”

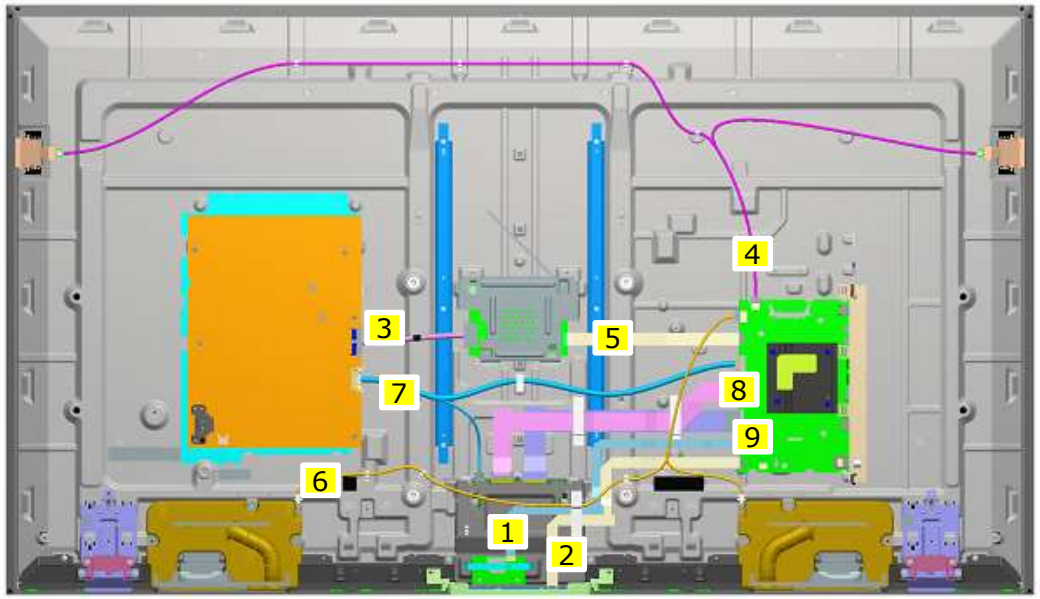

REF. NO	PART NO.	DESCRIPTION	REMARKS
1	1-006-505-11	FLEXIBLE FLAT CABLE 20P	CN3801(B)-CN1202(BT)(1)
2	1-006-508-11	FLEXIBLE FLAT CABLE 25P	CN1200(B)-CN102(H)(1)
3	1-007-098-11	CONNECTOR ASSY 15P	CN6601(PSU)-CN1003(LD)(1)
4	1-007-113-11	CONNECTOR ASSY 4P (PZ)	CN3500(B)-PZ(1)
5	1-007-185-11	FLEXIBLE FLAT CABLE 30P	CN1603(B)-CN1000(LD)(1)
6	1-007-219-11	CONNECTOR ASSY 6P (SP)	CN3501(B)-SP(1)
7	1-007-220-11	CONNECTOR ASSY 28P	CN1700(B)-CN6401(PSU)-CON3(TCON)(1)
8	1-007-187-11	FLEXIBLE FLAT CABLE 41P	CN4201(B)-U2(TCON)(1)
9	1-007-461-11	FLEXIBLE FLAT CABLE 51P	CN4200(B)-U1(TCON)(1)

PARTS LIST 65”

SET PART LIST

REF. NO	PART NO.	DESCRIPTION	REMARKS	
3 ⚠	1-005-621-11	C7L AC POWER CODE SETS (EU)	(CEI)	Cable
3 ⚠	1-005-628-11	C7L AC POWER CODE SETS (UK)	(UKA)	
11 🔒	A-5014-274-A	COMPL SVC BM5_WW_B2B	FW-65BZ40H	Printed Circuit Board, incl. capacitors
11 🔒	A-5014-265-A	COMPL SVC BM5_EUUK	Except FW-65BZ40H	
13 ⚠	1-006-110-12	G01-STATIC CONVERTER (TV)		Printed Circuit Board, incl. capacitors
15	A-5012-967-A	20LD32A2 COMPL		Printed Circuit Board, incl. capacitors
16	1-007-575-11	MOUNTED PWB E-T-CON(65)		Printed Circuit Board, incl. capacitors
17 ⚠	A-5016-552-A	P-MOD (YDAS065DND01)	FW-65BZ40H	
17 ⚠	A-5016-516-A	P-MOD (YDAS065DND01)	Except FW-65BZ40H/KE-65XH9077	Liquid Crystal Display
17 ⚠	A-5016-521-A	P-MOD (YDAS065DND01)	KE-65XH9077	

DISSASSEMBLY AND REMOVAL CAUTION 75”

SECTION 3
KE-75XH9*/FW-75BZ40H

3-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 1 :

Disassemble screw from Rear Cover.

Symbol	Quantity	Descriptions
○	1	Ac Cover Screw
○	4	Rear Cover Screw

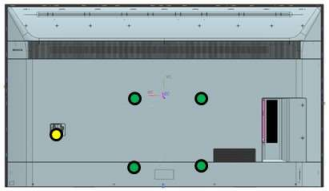

Step 2 :

Unhook Rear Cover Hook

(a) Side Hook

Symbol	Quantity	Descriptions
□	10	Rear Cover Push Point
□	10	Back Chassis – Rear Cover Hook
□	2	Bottom Back Chassis – Rear Cover Hook

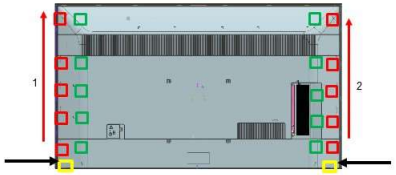

SECTION 3
KE-75XH9*/FW-75BZ40H

3-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 2 : (continue)

Unhook Rear Cover Hook

(a) Side Hook

1) Draw out a bottom side of Rear Cover
2) Hand in the gap of Rear Cover and Bezel and push the push position of Rear Cover

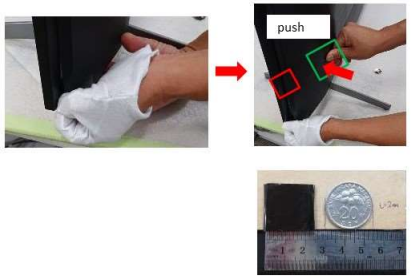

Notes:
- Must use gloves.
- Coin or jig to unhook bottom Rear Cover-Bezel hook
- Wrap coin by tape
- Thickness approximately 1.0 to 1.5mm

SECTION 3
KE-75XH9*/FW-75BZ40H

3-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 2 :

Unhook Rear Cover Hook

(b) Bottom Hook

Symbol	Quantity	Description
□	6	Bottom Back Chassis – Rear Cover Hook

1) Slit of the Rear Cover hook
2) Put coin or jig in the slit of Rear Cover hook
3) Turn coin or jig to the direction of the arrow

Notes:
- Coin or jig to unhook bottom Rear Cover-Bezel hook
- Wrap coin by tape
- Thickness approximately 1.0 to 1.5mm

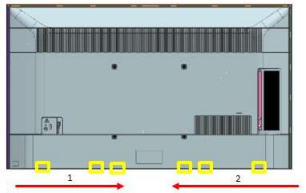

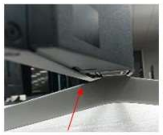

SECTION 3
KE-75XH9*/FW-75BZ40H

3-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 3 :

Unhook Top Back Chassis to Rear Cover hook

1) Pull the Rear Cover.
2) Push Rear Cover upwards to release the top hooks then lower the Rear Cover.

Symbol	Quantity	Description
○	8	Top side Back Chassis – Rear Cover Hook

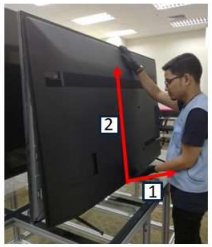

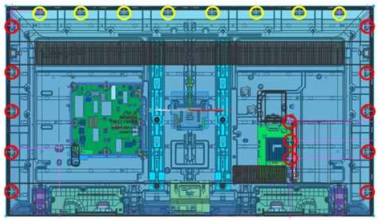

EXPLODED VIEW 75”

•Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
• ⚠ and shaded parts are critical for safety. Replace only with part number specified.
• 🔒 Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.

- (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
- Picture provided in this section might have slight difference from the actual sets.
- The reference number beside the part indicates the disassembly sequence.
- Remove screws before disassembly. Unplug connectors before disassembly

3-4 EXPLODED VIEW AND PART LIST

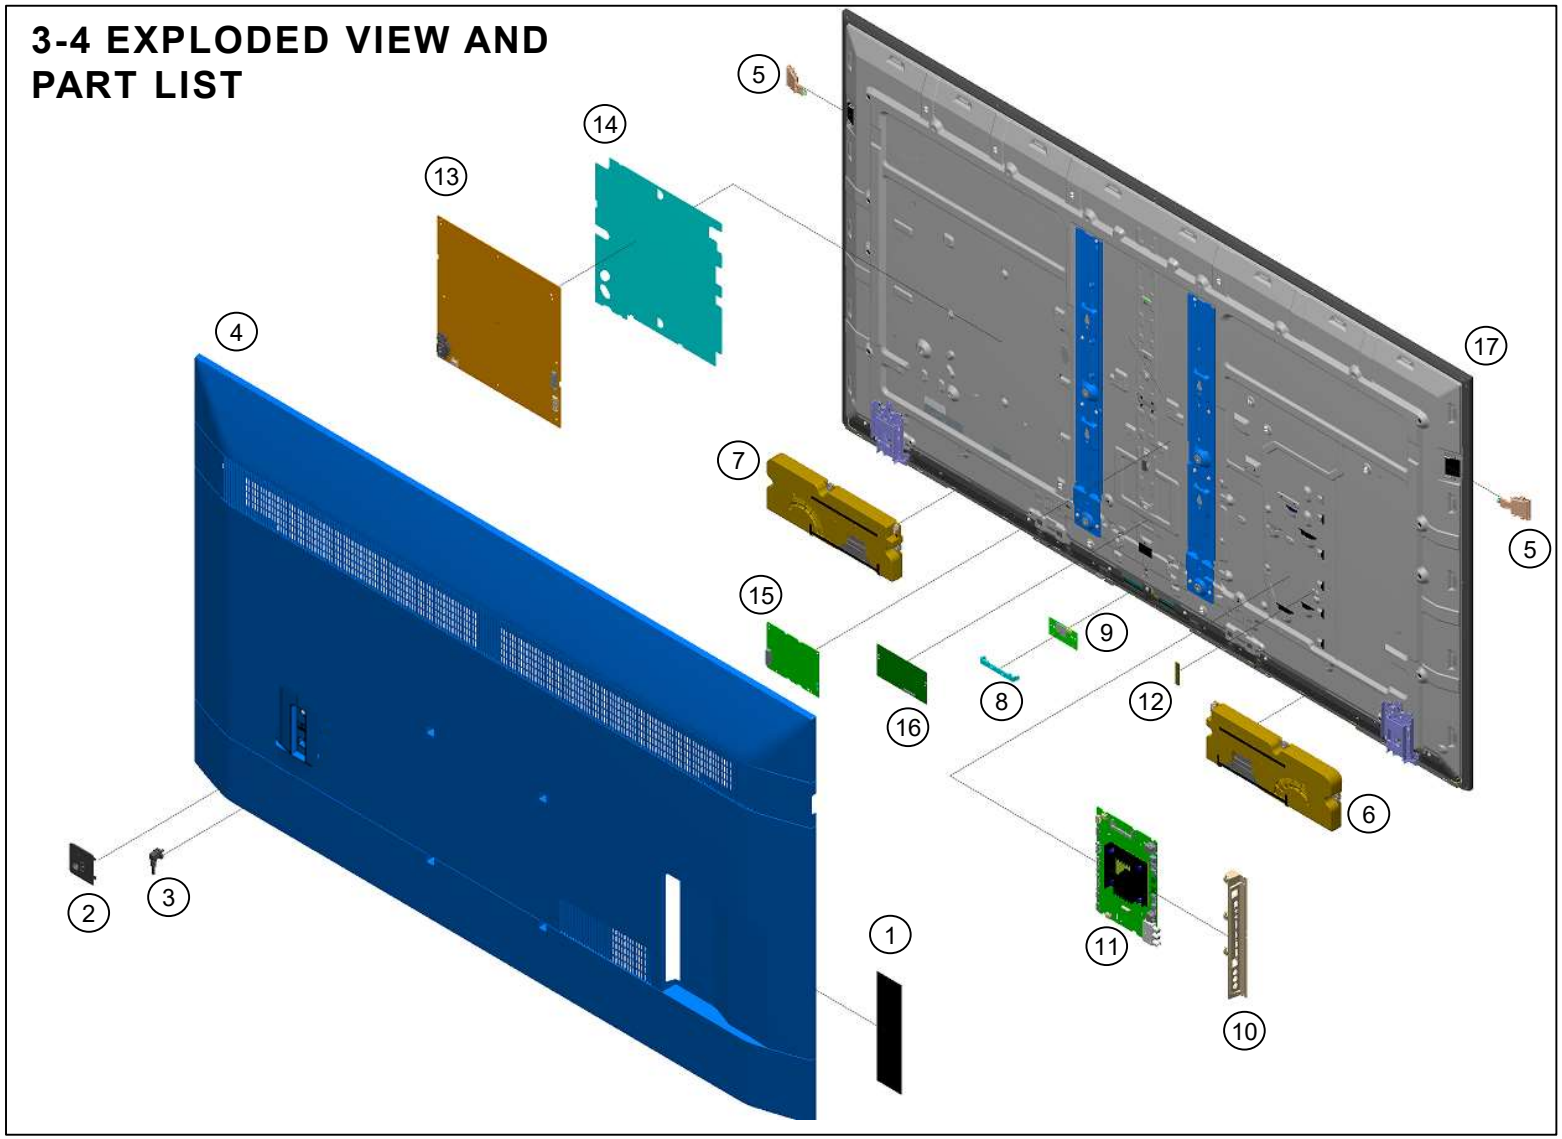

Stand

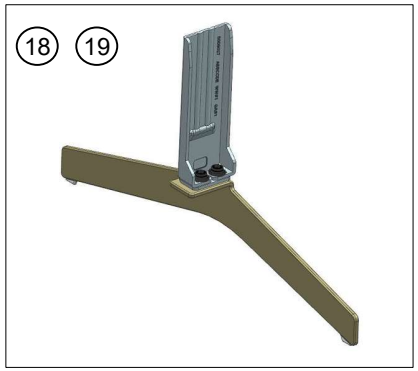

HARNESS/CABLES 75”

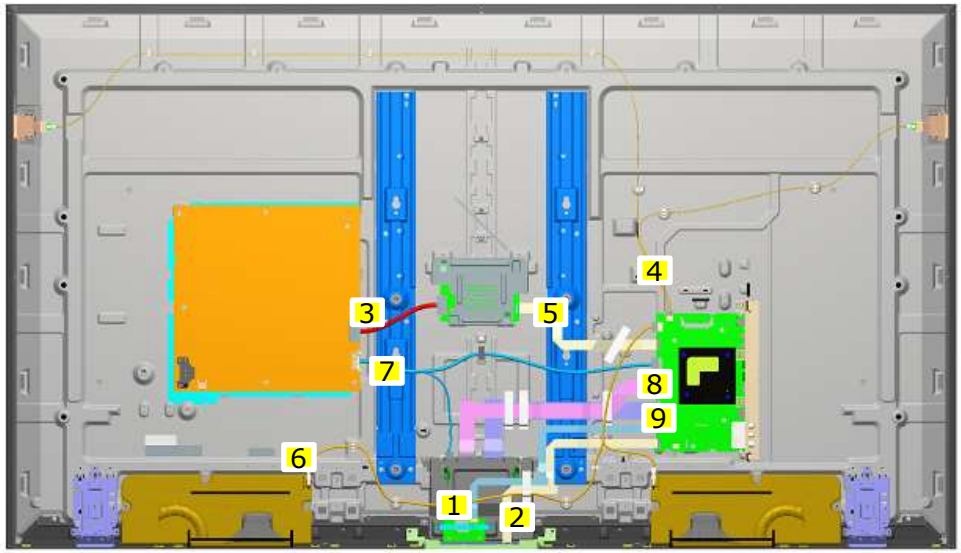

REF. NO	PART NO.	DESCRIPTION	REMARKS
1	1-006-505-11	FLEXIBLE FLAT CABLE 20P	CN3801(B)-CN1202(BT)(1)
2	1-006-508-11	FLEXIBLE FLAT CABLE 25P	CN1200(B)-CN102(H)(1)
3	1-007-098-11	CONNECTOR ASSY 15P	CN6601(PSU)-CN1003(LD)(1)
4	1-007-114-11	CONNECTOR ASSY 4P (PZ)	CN3500(B)-PZ(1)
5	1-007-188-11	FLEXIBLE FLAT CABLE 30P	CN1603(B)-CN1000(LD)(1)
6	1-007-221-11	CONNECTOR ASSY 6P (SP)	CN3501(B)-SP(1)
7	1-007-220-11	CONNECTOR ASSY 28P	CN1700(B)-CN6401(PSU)-CON3(TCON)(1)
8	1-007-187-11	FLEXIBLE FLAT CABLE 41P	CN4201(B)-U2(TCON)(1)
9	1-007-461-11	FLEXIBLE FLAT CABLE 51P	CN4200(B)-U1(TCON)(1)

PARTS LIST 75”

SET PART LIST

REF. NO	PART NO.	DESCRIPTION	REMARKS	
3 ⚠	1-005-621-11	C7L AC POWER CODE SETS (EU)	(CEI)	Cable
3 ⚠	1-005-628-11	C7L AC POWER CODE SETS (UK)	(UKA)	
11 🔒	A-5014-274-A	COMPL SVC BM5_WW_B2B	FW-75BZ40H	Printed Circuit Board, incl. capacitors
11 🔒	A-5014-265-A	COMPL SVC BM5_EUUK	Except FW-75BZ40H	
13 ⚠	1-006-133-21	G03BP - STATIC CONVERTER(TV)		Printed Circuit Board, incl. capacitors
15	A-5012-966-A	20LD32A1 COMPL		Printed Circuit Board, incl. capacitors
16	1-007-577-11	MOUNTED PWB E-T-CON(75)		Printed Circuit Board, incl. capacitors
17 ⚠	A-5016-558-A	P-MOD (YDAS075DND01)	FW-75BZ40H	Liquid Crystal Display
17 ⚠	A-5016-527-A	P-MOD (YDAS075DND01)	Except FW-75BZ40H	

DISSASSEMBLY AND REMOVAL CAUTION 85”

SECTION 4
KE-85XH9096/FW-85BZ40H

4-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 1 :

Disassemble screw from Rear Cover.

Symbol	Quantity	Descriptions
○	1	Ac Cover Screw
○	4	Rear Cover Screw

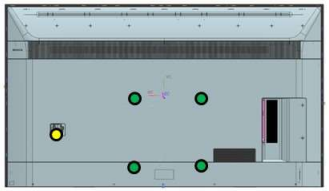

Step 2 :

Unhook Rear Cover Hook

(a) Side Hook

Symbol	Quantity	Descriptions
□	10	Rear Cover Push Point
□	10	Back Chassis – Rear Cover Hook
□	2	Bottom Back Chassis – Rear Cover Hook

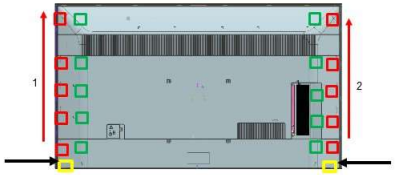

SECTION 4
KE-85XH9096/FW-85BZ40H

4-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 2 : (continue)

Unhook Rear Cover Hook

(a) Side Hook

1) Draw out a bottom side of Rear Cover
2) Hand in the gap of Rear Cover and Bezel and push the push position of Rear Cover

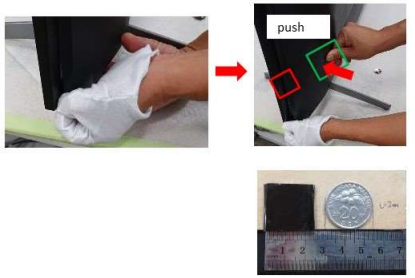

Notes:
- Must use gloves.
- Coin or jig to unhook bottom Rear Cover-Bezel hook
- Wrap coin by tape
- Thickness approximately 1.0 to 1.5mm

SECTION 4
KE-85XH9096/FW-85BZ40H

4-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 2 :

Unhook Rear Cover Hook

(b) Bottom Hook

Symbol	Quantity	Description
□	6	Bottom Back Chassis – Rear Cover Hook

1) Slit of the Rear Cover hook
2) Put coin or jig in the slit of Rear Cover hook
3) Turn coin or jig to the direction of the arrow

Notes:
- Coin or jig to unhook bottom Rear Cover-Bezel hook
- Wrap coin by tape
- Thickness approximately 1.0 to 1.5mm

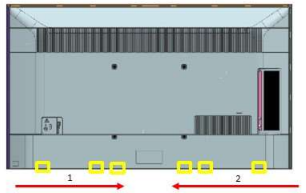

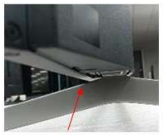

SECTION 4
KE-85XH9096/FW-85BZ40H

4-1. DISASSEMBLY AND REMOVAL CAUTION

Rear Cover

Step 3 :

Unhook Top Back Chassis to Rear Cover hook

1) Pull the Rear Cover.
2) Push Rear Cover upwards to release the top hooks then lower the Rear Cover.

Symbol	Quantity	Description
○	9	Top side Back Chassis – Rear Cover Hook

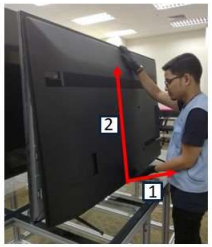

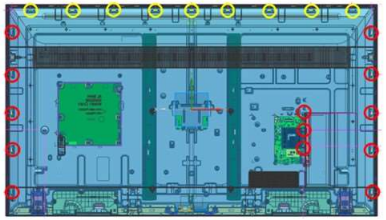

EXPLODED VIEW 85”

•Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
• ⚠ and shaded parts are critical for safety. Replace only with part number specified.
• 🔒 Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.

- (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
- Picture provided in this section might have slight difference from the actual sets.
- The reference number beside the part indicates the disassembly sequence.
- Remove screws before disassembly. Unplug connectors before disassembly

4-4 EXPLODED VIEW AND PART LIST

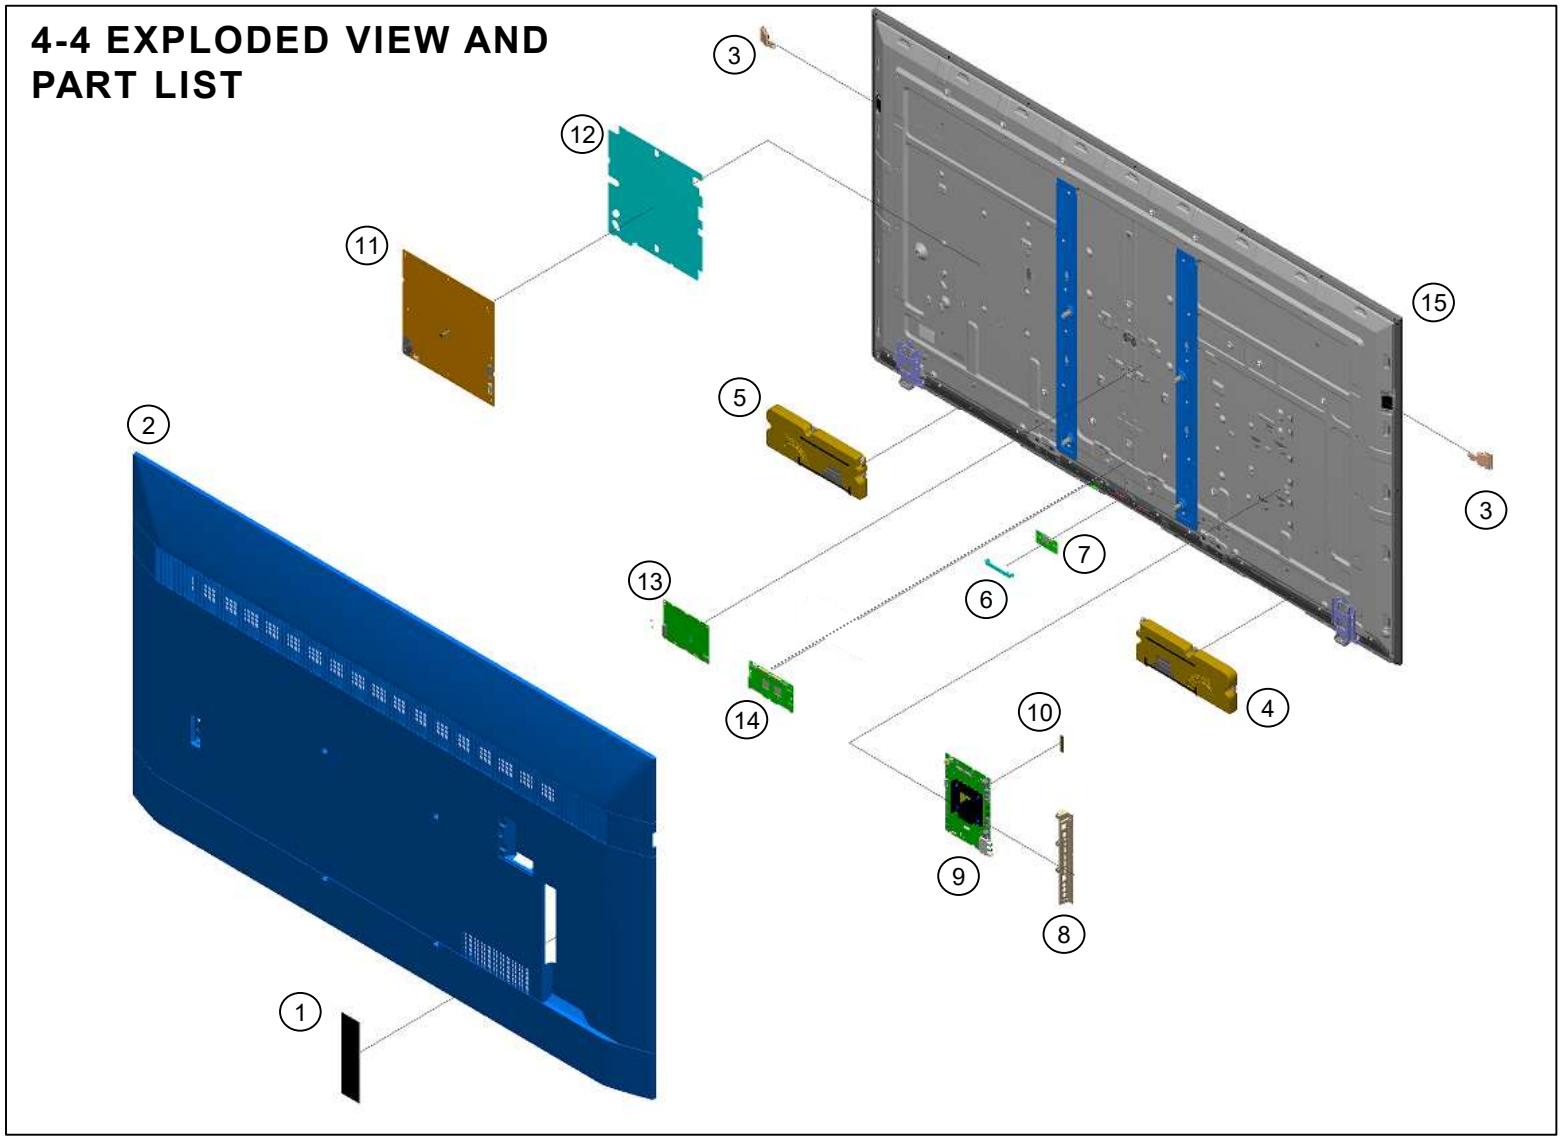

Stand

HARNESS/CABLES 85”

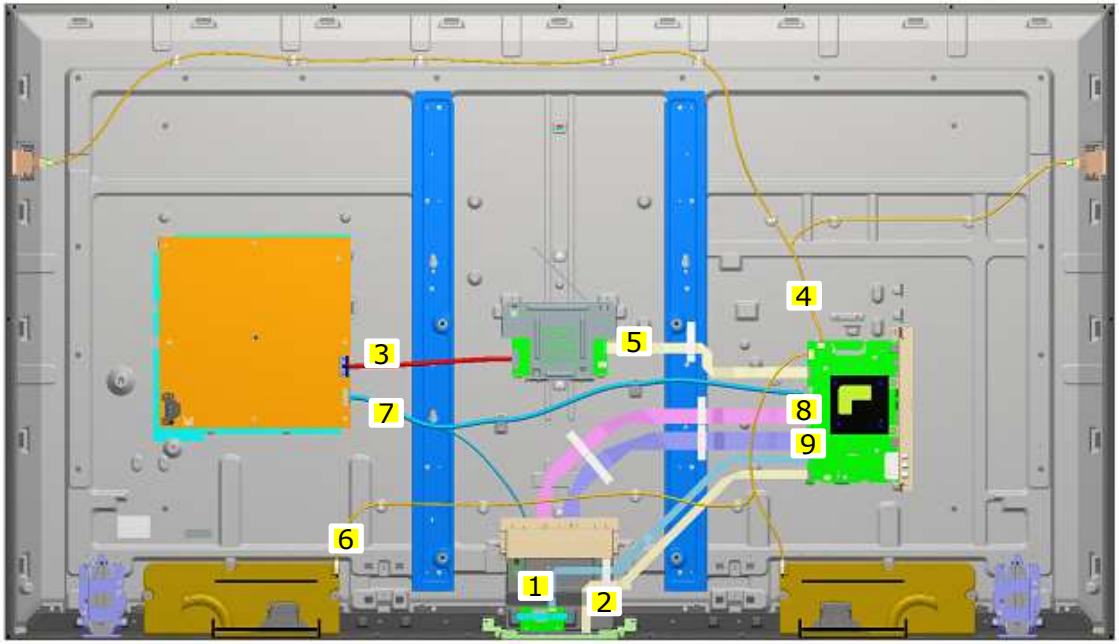

REF. NO	PART NO.	DESCRIPTION	REMARKS
1	1-006-521-11	FLEXIBLE FLAT CABLE 20P	CN3801(B)-CN1202(BT)(1)
2	1-006-524-11	FLEXIBLE FLAT CABLE 25P	CN1200(B)-CN102(H)(1)
3	1-007-223-11	CONNECTOR ASSY 15P	CN6601(PSU)-CN1003(LD)(1)
4	1-007-224-11	CONNECTOR ASSY 4P (PZ)	CN3500(B)-PZ(1)
5	1-007-192-11	FLEXIBLE FLAT CABLE 30P	CN1603(B)-CN1000(LD)(1)
6	1-007-225-11	CONNECTOR ASSY 6P (SP)	CN3501(B)-SP(1)
7	1-007-222-11	CONNECTOR ASSY 28P	CN1700(B)-CN6401(PSU)-CON3(TCON)(1)
8	1-007-193-11	FLEXIBLE FLAT CABLE 41P	CN4201(B)-U2(TCON)(1)
9	1-007-194-11	FLEXIBLE FLAT CABLE 51P	CN4200(B)-U1(TCON)(1)

PARTS LIST 85”

SET PART LIST

REF. NO	PART NO.	DESCRIPTION	REMARKS	
9	A-5014-274-A	COMPL SVC BM5_WW_B2B	FW-85BZ40H	Printed Circuit Board, incl. capacitors
9 ⚠	A-5014-265-A	COMPL SVC BM5_EUUK	KE-85XH9096	
11	1-006-109-22	G03P - STATIC CONVERTER (TV)		Printed Circuit Board, incl. capacitors
13	A-5012-965-A	20LD40A1 COMPL		Printed Circuit Board, incl. capacitors
14	1-007-935-11	MOUNTED PWB E-T-CON(85)		Printed Circuit Board, incl. capacitors
15 ⚠	A-5016-564-A	P-MOD (YDAS085DNU02)	FW-85BZ40H	Liquid Crystal Display
15 ⚠	A-5016-535-A	P-MOD (YDAS085DNU01)	KE-85XH9096	

OTHER PARTS

	PART NO.	DESCRIPTION	REMARKS	
⚠	1-005-621-11	C7L AC POWER CODE SETS (EU)	CEI	Cable
⚠	1-005-628-11	C7L AC POWER CODE SETS (UK)	UKA	